


# Clock Base Movement Mounting Instructions

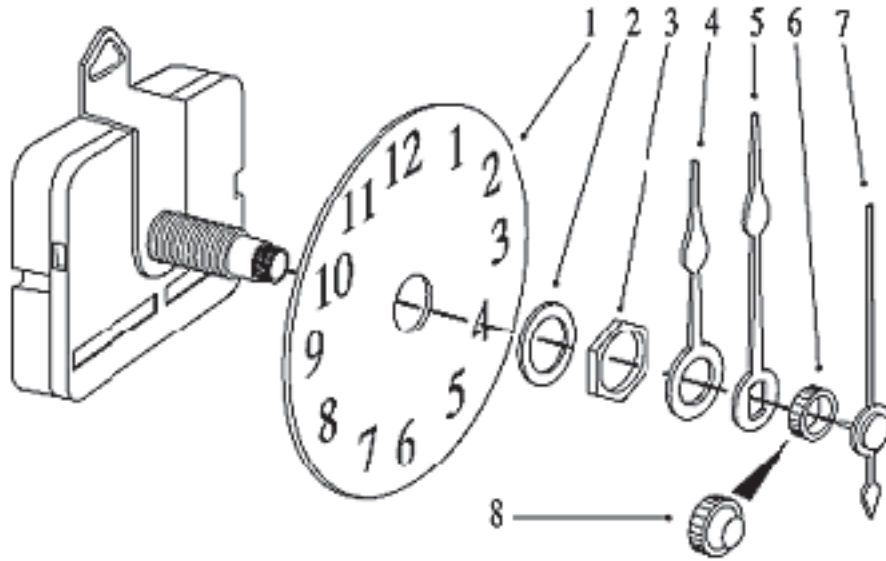

**1** Place clock body so that the shaft is going through the hole on the front of the clock and the base is hiding on the back side.




**2** Slide brass washer over shaft.




**3** Attach dial mounting hex nut.



**4** Gently press the hour hand onto the shaft at the 12:00 position

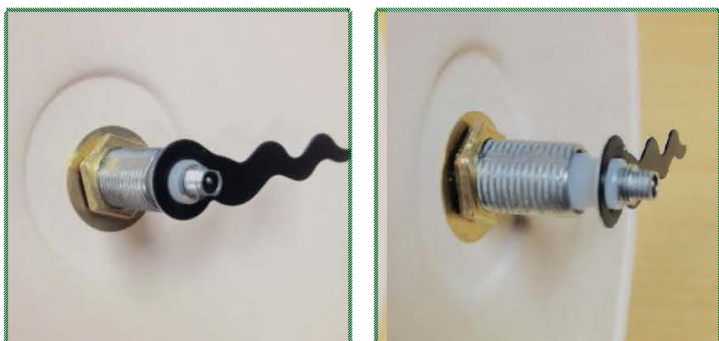

**5** Gently press the minute hand over the shaft at the 12:00 position and screw the minute nut in place

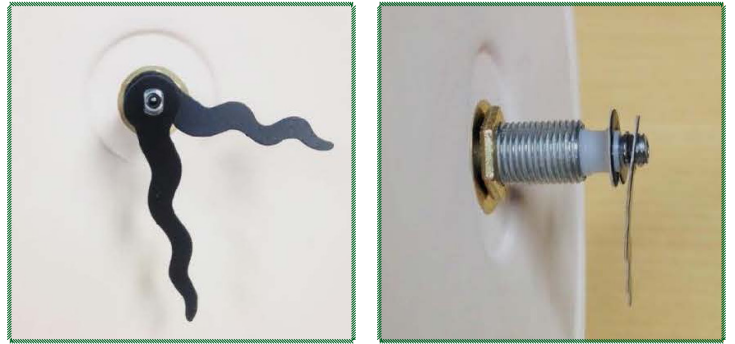

**6** If a second hand is included in clock hands kit, screw that on the very top of the shaft at the 12:00 position. This will cap everything off



**7** If no second hand is being used, screw on the cap nut to cap everything off

